

MCU4 INSTALLATION & MAINTENANCE MANUAL



**BRADSHAW
COMMUNICATION
SYSTEMS**

MODEL MCU4 MOTOR CONTROL UNIT INSTALLATION & MAINTENANCE MANUAL

**Bradshaw Communication Systems
94 Worldwide Drive
Dawsonville, Georgia 30534
Telephone: 770-844-9704
Fax: 770-886-0205
<http://www.bcstech.com>**

TABLE OF CONTENTS

	PAGE
INTRODUCTION.....	3
A. Manual Purpose.....	3
B. Manual Organization.....	3
C. Required Installation / Setup Equipment.....	3
D. Unit Specifications.....	3
E. Customer Support.....	3
MCU4 INSTALLATION.....	4
A. Safety Precautions.....	4
B. Introduction.....	4
1. Typical System Configuration.....	4
C. MCU4 Mounting.....	5
D. Interface Wiring Charts.....	5
1. Termination Notes.....	5
2. MCU4 to Azimuth Track Motor.....	6
3. MCU4 to Azimuth Slew Motor (-2 & -4 ONLY).....	6
4. MCU4 to Azimuth Brake (-3 & -4 ONLY).....	6
5. MCU4 to Elevation Track Motor.....	6
6. MCU4 to Elevation Slew Motor (-2 & -4 ONLY).....	7
7. MCU4 to Elevation Brake (-3 & -4 ONLY).....	7
8. MCU4 to Polarization Motor (Optional).....	7
9. MCU4 to Azimuth Limit Switch/s.....	8
10. MCU4 to Elevation Limit Switch/s.....	8
11. MCU4 to Polarization Limit Switch/s (Optional).....	8
12. MCU4 to Auxiliary Emergency Stop Switch/s (Optional).....	9
13. MCU4 to Primary Input Power.....	9
14. MCU4 Logic Control PWA Input Power Configuration.....	9
E. Installation Instructions.....	10
1. Wiring/Pre Power-Up Verification.....	10
2. Motor Phasing & Limit Switch Testing.....	10
MCU4 MAINTENANCE.....	11
A. Maintenance.....	11
B. Troubleshooting.....	11

INTRODUCTION

A. MANUAL PURPOSE

This manual contains installation and maintenance instructions for the Bradshaw Communication Systems MCU4 Motor Control Unit. The instructions herein are provided for personnel responsible for installing and maintaining the MCU4. A nameplate label located on the inside cover door of the MCU4 identifies the units' model number, part number, revision, and serial number. The serial number is used by Bradshaw Communication Systems (BCS) to identify the units' particular configuration of options.

This manual does not provide information pertaining to the operation of the MCU4. Information pertaining to operation of the MCU4 is found only in the MCU4 Operators Manual. It is required that a installation and/or service technician have a thorough understanding of the operation of the MCU4 prior to any attempts to install or service the unit. Any required internal repairs to the MCU4 should be referred to qualified service personnel.

B. MANUAL ORGANIZATION

This manual is organized into the following three sections:

“Introduction” – This section provides manual purpose, manual organization, required installation/setup equipment, unit specifications, and customer support information.

“MCU4 Installation” – This section provides safety precautions, typical system configuration, MCU4 Mounting, and interface wiring information.

“MCU4 Maintenance” – This section provides information pertaining to preventative maintenance and troubleshooting of the MCU4.

C. REQUIRED INSTALLATION / SETUP TOOLS & EQUIPMENT

1 EACH	Medium Phillips Screwdriver
1 EACH	Medium Flat-blade Screwdriver
1 EACH	Adjustable Wrench
1 EACH	Socket Wrench Set
1 EACH	Multi-meter (capable of direct current voltage measurement)
MISC.	Multi-meter Test Leads

D. UNIT SPECIFICATIONS


Dimensions:	18" (45.7cm) high x 16" (40.6cm) wide x 10" (25.4cm) deep
Weight:	33 LBS (15 Kg)
Power Requirements:	3 Phase Power - Voltage & Current Dependent on Motor Sizes
Environmental:	-40° to 50°Celsius (-40° to 122° Fahrenheit) Operational 100% Relative Humidity
Enclosure:	Wall Mounted Weatherproof NEMA 4X Enclosure with Hinged Cover with Pad-Lockable Quick Release Latches.
Enclosure Finish:	Fiberglass Polyester
Enclosure Color:	Light Gray

E. CUSTOMER SUPPORT

Customer support, replacement parts, and repair are available 8AM – 5PM EST M-F by contacting Bradshaw Communication Systems at 770-844-9704 or by fax at 770-886-0205. Additional support may be obtained from our website at <http://www.bcstech.com>

MCU4 INSTALLATION

A. SAFETY PRECAUTIONS




Lethal voltages are present inside the MCU4. Emergency Stop switches and other interlocks will disable the system, but do not disconnect the MCU4 from primary power. Refer all troubleshooting and repair to qualified service personnel. The MCU4 contains no operator serviceable parts.

B. INTRODUCTION

Typical System Configuration

The MCU4 is designed to allow automatic control via an Antenna Control Unit (ACU1) or local manual positioning of an earth station antenna. Operators may use the controls on the MCU Handheld Controller to provide control at the antenna structure. The MCU4 is normally only a part of the complete antenna control system, however, the MCU4 used in conjunction with the MCU Handheld Controller has all controls necessary to allow positioning of the earth station antenna. This redundancy is extremely useful in the unlikely event of an Antenna Control Unit failure or if local positioning is required for antenna maintenance or other. A typical antenna control system configuration using the MCU4 is depicted in Figure 1. Note that the addition of the motors and limit switches are all that is required to allow local positioning of the earth station antenna.

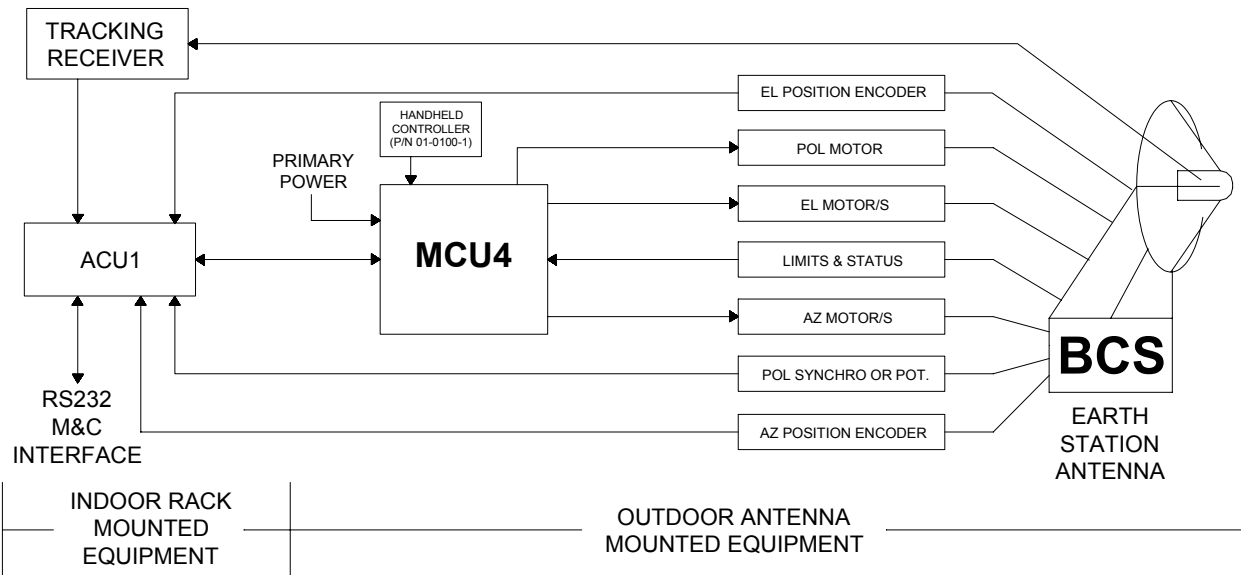

TYPICAL SYSTEM CONFIGURATION
FIGURE 1

The ACU1 is the main system component and contains the control logic electronics to generate motor drive commands. The motor control commands are produced in response to inputs from the position encoders, limit and status switches, front panel controls, and R.F. signal receiving equipment. Control may also be accomplished via the RS-232 monitor & control port.

The angular position of each axis is reported by synchro based position encoders that are mounted on their corresponding axes of the earth station antenna. The signal from these position encoders is converted in the ACU1 to provide an angular display on the front panel display as well as being used for automatic positioning modes.

For automatic satellite tracking operation (Steptrack), a D.C. signal proportional to signal strength is connected to the ACU1. This signal is then used by the ACU1 to optimize the antenna position when in Steptrack mode.

The ACU1 is connected to the MCU4, which produces the high voltage required to start and stop the earth station antennas' motors. Each axis has a motor (or possibly two depending upon configuration), which allow electrical control of the mechanical movement of each antenna axis. In some system configurations two motors (or dual speed) motors are employed allowing two-speed control of each antenna axis. The MCU4 allows for simultaneous control of all three axis motors if equipped with a motorized polarization axis. The polarization speed is fixed and is directly proportional to the antenna polarization gearing.

If the earth station antenna being controlled by the ACU1 has a linearly polarized feed, the ACU1 polarization option is employed. This option allows the ACU1 to receive a signal from an additional position encoder (either a synchro transmitter or potentiometer depending upon configuration) and to control an additional motor via the MCU3. By adding the additional position encoder and motor the ACU1 can remotely control the rotation of the earth station antenna polarization feed horn.

The ACU1 is generally rack mounted and located in the control room area, while the position encoders, limit switches, MCU4, and motors are generally located on the earth station antenna structure. The R.F. tracking equipment is generally located in the control room area with the ACU1.

C. MCU4 MOUNTING

The MCU4 design provides for mounting the unit via four tabs. Two tabs at the top of the unit and two at the bottom. These tabs are provided loose inside the MCU4 and alternately may not be installed to allow rear mounting using the MCU4 enclosure's four captive 10-32 threaded inserts. Standard ¼ inch hardware may be used for mounting through the mounting tabs to the appropriate mounting location. Due to the variety of antennae the MCU4 may be used with, mounting specific instructions cannot be provided. For unit mounting and dimensional data assistance, please contact Bradshaw Communication Systems.

D. INTERFACE WIRING CHARTS

1. Termination Notes

NOTE 1: Limit switch contacts must be closed for a non-limit condition. All limit switch contacts must be isolated.

NOTE 2: Jumper wires are installed on TB-3 and TB-4 to "jumper" the auxiliary Azimuth, Elevation, & Polarization Interlock connections as well as the auxiliary Emergency Stop connection. These jumper wires may be removed to allow the insertion of additional safety interlock switches as required. The switches must be normally closed and may be connected in series to provide multiple interlock points as required.

Pre-installed Jumpers:

Emergency Stop	TB3-1 to TB3-2
Azimuth Interlock	TB3-3 to TB3-4
Elevation Interlock	TB3-9 to TB4-1
Polarization Interlock	TB4-6 to TB4-7

2. MCU4 to Azimuth Track Motor

Azimuth Track Speed Motor Cable

FROM MCU4 (EURO Terminal Block)			TO AZIMUTH TRACK MOTOR (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB2-1	Stripped Wire		Track Motor L1	Wire-Nut		Track Motor Phase A
TB2-2	Stripped Wire		Track Motor L2	Wire-Nut		Track Motor Phase B
TB2-3	Stripped Wire		Track Motor L3	Wire-Nut		Track Motor Phase C
GROUND BAR	Stripped Wire		Track Motor CASE	#10 Ring Terminal		Track Motor Safety Ground

3. MCU4 to Azimuth Slew Motor (-2 & -4 ONLY)

Azimuth Slew Speed Motor Cable (-2 & -4 ONLY)

FROM MCU4 (EURO Terminal Block)			TO AZIMUTH SLEW MOTOR (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB2-4	Stripped Wire		Slew Motor L1	Wire-Nut		Slew Motor Phase A
TB2-5	Stripped Wire		Slew Motor L2	Wire-Nut		Slew Motor Phase B
TB2-6	Stripped Wire		Slew Motor L3	Wire-Nut		Slew Motor Phase C
GROUND BAR	Stripped Wire		Slew Motor CASE	#10 Ring Terminal		Slew Motor Safety Ground

4. MCU4 to Azimuth Brake (-3 & -4 ONLY)

Azimuth Brake Cable (-3 & -4 ONLY)

FROM MCU4 (EURO Terminal Block)			TO AZIMUTH BRAKE (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB2-7	Stripped Wire		Azimuth Brake L1	Wire-Nut		Azimuth Brake Line
TB2-8	Stripped Wire		Azimuth Brake L2	Wire-Nut		Azimuth Brake Neutral
GROUND BAR	Stripped Wire		Azimuth Brake CASE	#10 Ring Terminal		Azimuth Brake Safety Ground

5. MCU4 to Elevation Track Motor

Elevation Track Speed Motor Cable

FROM MCU4 (EURO Terminal Block)			TO ELEVATION TRACK MOTOR (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB3-1	Stripped Wire		Track Motor L1	Wire-Nut		Track Motor Phase A
TB3-2	Stripped Wire		Track Motor L2	Wire-Nut		Track Motor Phase B
TB3-3	Stripped Wire		Track Motor L3	Wire-Nut		Track Motor Phase C
GROUND BAR	Stripped Wire		Track Motor CASE	#10 Ring Terminal		Track Motor Safety Ground

6. MCU4 to Elevation Slew Motor (-2 & -4 ONLY)

Elevation Slew Speed Motor Cable (-2 & -4 ONLY)

FROM MCU4 (EURO Terminal Block)			TO ELEVATION SLEW MOTOR (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB3-4	Stripped Wire		Slew Motor L1	Wire-Nut		Slew Motor Phase A
TB3-5	Stripped Wire		Slew Motor L2	Wire-Nut		Slew Motor Phase B
TB3-6	Stripped Wire		Slew Motor L3	Wire-Nut		Slew Motor Phase C
GROUND BAR	Stripped Wire		Slew Motor CASE	#10 Ring Terminal		Slew Motor Safety Ground

7. MCU4 to Elevation Brake (-3 & -4 ONLY)

Elevation Brake Cable (-3 & -4 ONLY)

FROM MCU4 (EURO Terminal Block)			TO ELEVATION BRAKE (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB3-7	Stripped Wire		Elevation Brake L1	Wire-Nut		Elevation Brake Line
TB3-8	Stripped Wire		Elevation Brake L2	Wire-Nut		Elevation Brake Neutral
GROUND BAR	Stripped Wire		Elevation Brake CASE	#10 Ring Terminal		Elevation Brake Safety Ground

8. MCU4 to Polarization Motor (Optional)

Polarization Motor Cable

FROM MCU4 (EURO Terminal Block)			TO POLARIZATION MOTOR (Wire Leads)			
TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB4-1	Stripped Wire		MOTOR CCW LEAD	Wire-Nut		MOTOR CCW
TB4-2	Stripped Wire		MOTOR COMMON LEAD	Wire-Nut		MOTOR COMMON
TB4-3	Stripped Wire		MOTOR CW LEAD	Wire-Nut		MOTOR CW
GROUND BAR	Stripped Wire		MOTOR CASE	#10 Ring Terminal		Safety Ground

9. MCU4 to Azimuth Limit Switch/s

Azimuth Limit Switch/s Cable

FROM MCU4 CTL PWA (Pluggable Terminal Block) TO AZIMUTH LIMIT SWITCH/S (#6 Screws)

TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
PWA TB3-8	Stripped Wire		CLOCKWISE N.C.	#6 Ring Terminal	NOTE 1	CW Status
PWA TB3-7	Stripped Wire		CLOCKWISE COMMON	#6 Ring Terminal	NOTE 1	CW Return
PWA TB3-6	Stripped Wire		COUNTER-CLOCKWISE N.C.	#6 Ring Terminal	NOTE 1	CCW Status
PWA TB3-5	Stripped Wire		COUNTER-CLOCKWISE COMMON	#6 Ring Terminal	NOTE1	CCW Return

10. MCU4 to Elevation Limit Switch/s

Elevation Limit Switch/s Cable

FROM MCU4 CTL PWA (Pluggable Terminal Block) TO ELEVATION LIMIT SWITCH/S (#6 Screws)

TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
PWA TB4-5	Stripped Wire		UP N.C.	#6 Ring Terminal	NOTE 1	UP Status
PWA TB4-4	Stripped Wire		UP COMMON	#6 Ring Terminal	NOTE 1	UP Return
PWA TB4-3	Stripped Wire		DOWN N.C.	#6 Ring Terminal	NOTE 1	DOWN Status
PWA TB4-2	Stripped Wire		DOWN COMMON	#6 Ring Terminal	NOTE1	DOWN Return

11. MCU4 to Polarization Limit Switch/s (Optional)

Polarization Limit Switch/s Cable

FROM MCU4 CTL PWA (Pluggable Term. Block) TO POLARIZATION LIMIT SWITCH/S (#6 Screws)

TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
PWA TB4-11	Stripped Wire		CLOCKWISE N.C.	#6 Ring Terminal	NOTE 1	CW Status
PWA TB4-10	Stripped Wire		CLOCKWISE COMMON	#6 Ring Terminal	NOTE 1	CW Return
PWA TB4-9	Stripped Wire		COUNTER-CLOCKWISE N.C.	#6 Ring Terminal	NOTE 1	CCW Status
PWA TB4-8	Stripped Wire		COUNTER-CLOCKWISE COMMON	#6 Ring Terminal	NOTE1	CCW Return

12. MCU4 to Auxiliary Emergency Stop Limit Switch/s (Optional)

Auxiliary Emergency Stop Limit Switch/s Cable

FROM MCU4 CTL PWA (Pluggable Terminal Block) TO EMERG. STOP LMT SWITCH/S (#6 Screws)

TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB3-2	Stripped Wire	NOTES 1 & 2	STOP SWITCH N.C.			Emergency Stop (N.C.)
TB3-1	Stripped Wire	NOTES 1 & 2	STOP SWITCH COMMON			Emergency Stop (COM)

13. MCU4 to Primary Input Power

Primary Input Power Cable

FROM MCU4 (EURO Terminal Block) TO PRIMARY INPUT POWER

TERMINATION	TYPE	NOTES	TERMINATION	TYPE	NOTES	FUNCTION
TB1-1	Stripped Wire		PHASE A			Phase A
TB1-2	Stripped Wire		PHASE B			Phase B
TB1-3	Stripped Wire		PHASE C			Phase C
TB1-4	Stripped Wire		NEUTRAL			Neutral
GROUND BAR	Stripped Wire		SAFETY GROUND			Safety Ground

14. MCU4 Logic Control PWA Input Power Configuration

Logic Control PWA Input Power Configuration




WARNING: FAILURE TO PROPERLY JUMPER THE LOGIC CONTROL PWA COULD RESULT IN PERSONAL INJURY AND/OR PERMANENT MCU4 DAMAGE!


Prior to applying power to the MCU4, configure jumper block J1 on the MCU4 Logic Control PWA for the appropriate input voltage as follows:

Voltage Present Between TB5 Terminals 1 & 2 (L1 to Neutral Voltage Value)

**115
VOLTS**



**230
VOLTS**



E. INSTALLATION INSTRUCTIONS

1. Wiring/Pre Power-up Verification

Prior to application of power, verify the following:

- a. Proper input voltage and wiring.
- b. Use a multi-meter on ohm scale to verify high impedance between each motor connection and safety ground. This step is crucial to avoid damage to the MCU4.
- c. Check continuity of all wiring to ensure proper wiring per the installation wiring charts.

2. Motor Phasing & Limit Switch Testing

- a. Plug in the MCU Handheld Controller to the handheld connector on the bottom of the MCU4.
- b. Verify the Emergency Stop Switch/s is in the normal operation position (pulled out).
- c. Turn ON the MCU4 control, azimuth, elevation, and polarization (optional) power circuit breakers.
- d. Set the SLEW/NORMAL Switch on the MCU Handheld to the NORMAL position.
- e. Using the MCU Handheld Axis Jog Switch for Azimuth, command the CW direction. The antenna should rotate in the CW direction. If the antenna rotates CCW, turn off all power to the MCU4 and switch any two motor phase wires to change phasing to obtain the proper direction of rotation.
- f. While commanding the CW direction, manually activate the CW Limit Switch. Verify antenna motion is stopped in the CW direction. Verify that axis movement in the CCW direction is still functional even though the CW Limit Switch is still manually activated.
- g. Repeat steps “e” & “f” for the remaining axes and directions as follows:

Azimuth CCW
Elevation UP
Elevation DOWN
⊗ Polarization CW
⊗ Polarization CCW

⊗ Switch forward and reverse motor leads to change polarization motor rotation.
- h. After all axes limit switch functionality and directions have been checked by manually activating the various limit switches, verify proper limit operation and adjustment by commanding the antenna into each limit. The MCU4 should be able to drive out of each limit, but not further into the limit. Check at both NORMAL and SLEW (if SLEW option is employed) speeds starting with NORMAL.

MCU4 MAINTENANCE

A. MAINTENANCE

At six-month intervals, inspect the interior of the MCU4 for excessive dust, dirt, and/or moisture. Remove any such accumulations with a damp cloth only after ensuring all input power has been removed.

Add desiccant packets inside the bottom of the MCU4 if the unit is opened frequently or if the MCU4 is located in a heavy humidity environment.

B. TROUBLESHOOTING

In the event a motor does not turn in the proper direction, reverse any two phases at the motor to obtain proper rotation. If a limit switch does not properly stop antenna motion in a given direction, reverse the limit switch wiring to ensure proper antenna motion direction to proper limit switch orientation.

If the antenna does not respond to MCU Handheld Controller Axis Jog commands, verify the following:

1. Proper input power is applied
2. Power Circuit Breaker is in the "up" (ON) position
3. MCU Handheld is properly plugged in
4. All Motor Power Circuit Breakers are in the "up" (ON) position
5. MCU4 Logic Power PWA red power supply ON LED is illuminated
6. Emergency Stop Switch/s is not depressed (pull to reset)

If the antenna does not respond to ACU1 commands, verify the following:

1. Proper MCU4 input power is applied
2. Power Circuit Breaker is in the "up" (ON) position
3. MCU Handheld is NOT plugged in disabling ACU control (LOCAL)
4. All Motor Power Circuit Breakers are in the "up" (ON) position
5. MCU4 Logic Power PWA red power supply ON LED is illuminated
6. Emergency Stop Switch/s is not depressed (pull to reset)
7. ACU1 to MCU4 Control & Status Cables are properly secured and in good condition.